 


Angekis®

Angekis ASP - 10 HD
Portable USB Speakerphone
User Manual

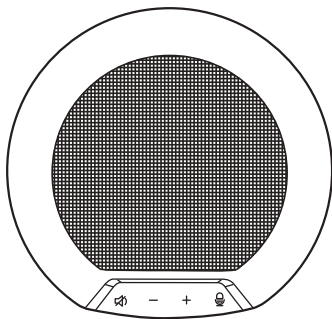 


Please read the user manual before using
the product and keep it for future

Overview

This is a HD conference speakerphone that uses touch key to handle voice and gesture mike risk control. Also it enables you to start a meeting quickly only by one USB cable .It is integrated with the third generation of AUCTIONUS Audio processing technology, which has entirely improved the communication experience.


Component

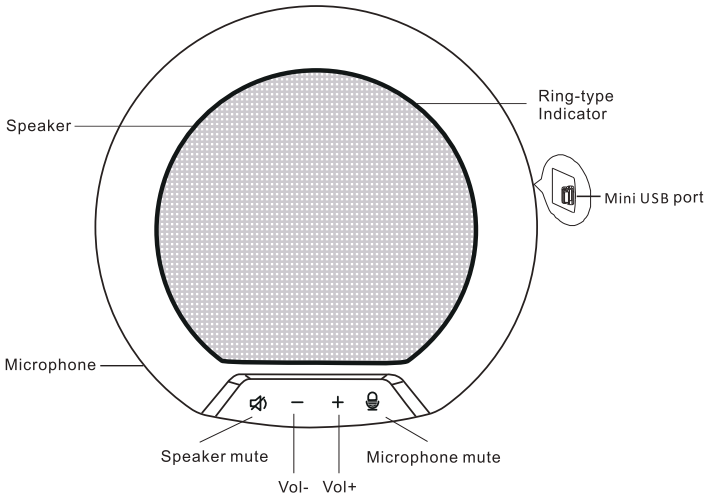

Ring-type LED indicator

- Green: working status
- Flash in green: speaker mute
- Red: microphone mute
- Alternately blink in green and red: microphone and speaker mute
- Full in green: Max volume(10 levels adjustment)

 Packing list

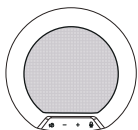

Speakerphone



USB cable



USB extend line

 


User manual




warranty card

Installation

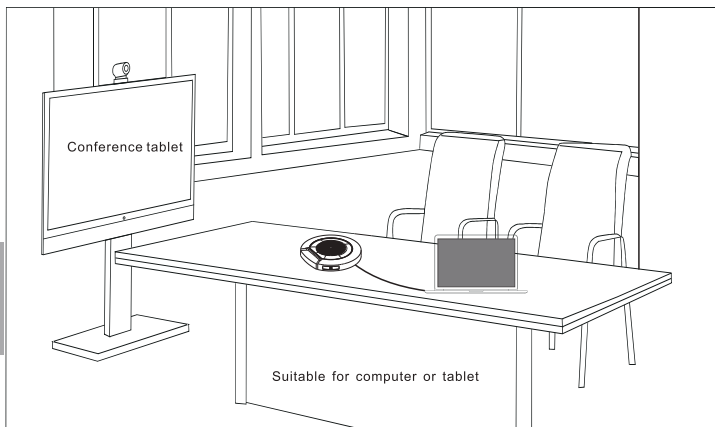


3D gesture sensing control

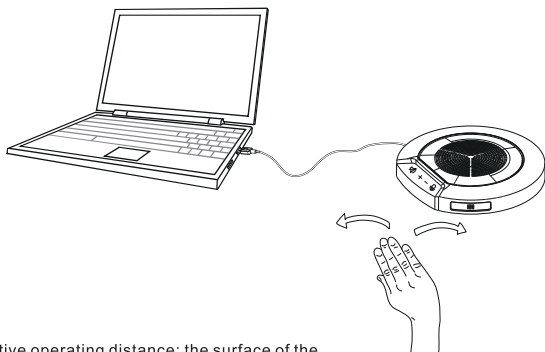 

Notes:

1. Effective operating distance: the surface of the equipment shall be no more than 10cm vertical
2. The operation direction is horizontal forward, backward, left and right

 Volume adjustment indicator (10 level adjustment)

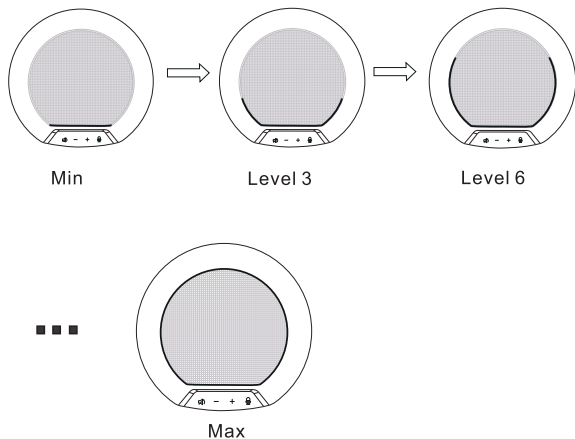

Operation

1. Internet conference call


After successful connection, open your computer instant communication software for real time calling

2. Volume adjustment


Adjust appropriate volume by "vol+" and "vol-" on the host

Press "-" gradually to lower speaker volume or long press "-" to lower speaker volume continuously; Press "+" gradually to increase speaker volume or long press "+" to increase the speaker volume continuously.

3. Microphone pickup and mute

The default microphone status is picked up and microphone can be turned off by microphone mute button. Press  to turn off the microphone. Press again to turn on.

4. Speaker play and mute

The default speaker status is power on and speaker can be turned off by loudspeaker mute button. Press  to turn off the speaker. Press again to turn on.

5. External audio equipment

It can be used as an external loudspeaker device for computers to play corresponding audio

6. LED indicator

The LED status indicator displays the working status of the host in real time

7. 3D gesture control system

On/off the microphone through infrared induction

Just slide your hand over the host and close the microphone.

Operation distance shall be controlled within 10cm above the device.

8. USB HID Reverse control

Intelligent man-machine interaction, make computer volume and microphone consistent

Note:

1. The equipment cannot be compatible with other speakers at the same time
2. After successful connection, if the input and output of the audio equipment in the computer control panel are not all "USB PnP Sound Device" may result in abnormality audio of the device.

Attention

After the connection is completed, the following steps should be used to check whether the computer has correctly identified the product.

On Windows system:

1. Right click the speaker icon at the bottom right of the screen, and then click "playback". Display the playback interface.
2. Check whether the device is set to the default speaker. If not, please click "USB PnP Sound Device" and select set to default.



Attention

3. Right click "Recording" to check whether "USB PnP Sound Device" is the default microphone. If not, please click "USB PnP Sound Device" and select



Attention

Adjust microphone sensitivity

The sound you hear at the far end may be distorted or too low depending on all different systems. If this happens, please adjust the sensitivity (input volume) of the microphone.

 
1. Right click the speaker icon at the bottom right of the screen, and then click "recording device". Display "recording device" interface.
2. Click "USB PnP Sound Device" and properties. Displays the *** property interface
3. Click the level TAB to adjust microphone sensitivity in the microphone field



Attention


Mac os

1. Click the apple icon at the top left of the screen, and then click "system preferences" and "sound".click"Recording"to check whether "USB PnP Sound Device" is the default microphone. If not, please click "USB PnP Sound Device" and select set to default.

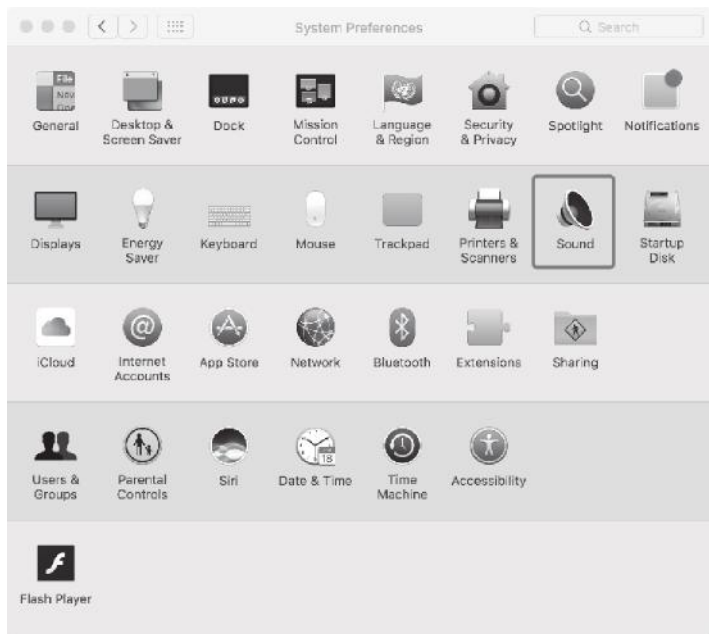

Attention

 2. Click the output and input tabs respectively. To check if you have selected sound output and input as "USB PnP Sound Device" from the device field. If not, click "USB PnP Sound Device".

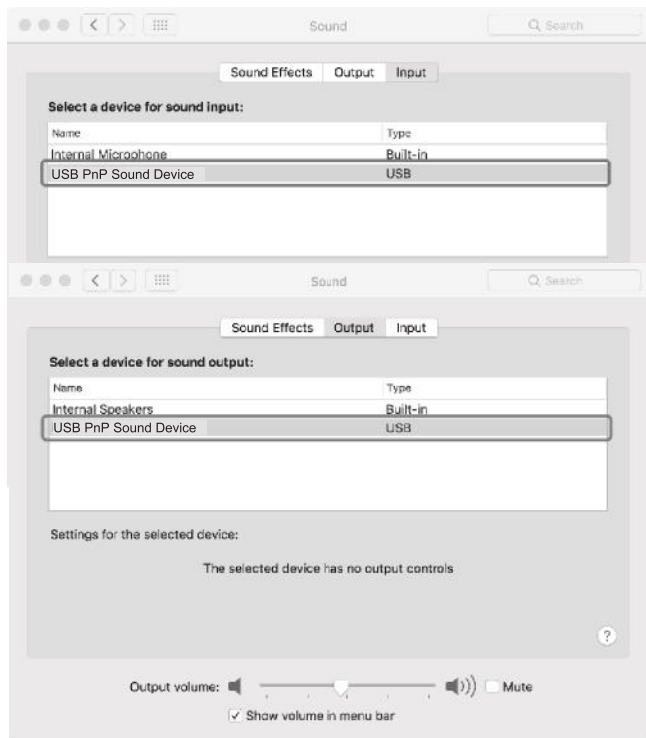

A professional conference phone